
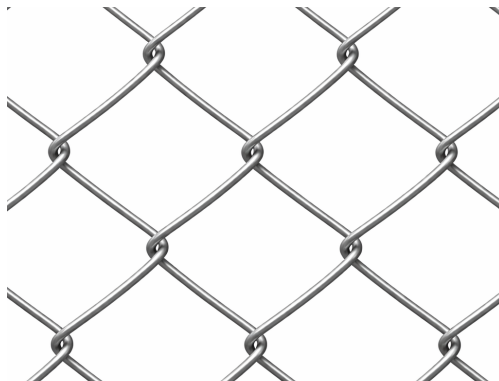


Rete a maglia sciolta zincata

Simplex / Simplexfort

Galvanised chain-link fencing

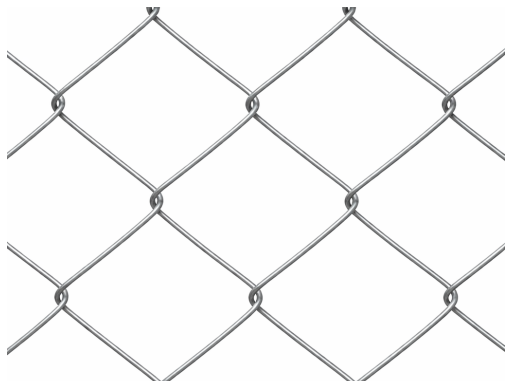

PRODOTTO

Rete per recinzioni caratterizzata da maglie romboidali flessibili, elastiche e facilmente adattabili anche a terreni irregolari o in pendenza.

Realizzata con filo d'acciaio zincato, è indicata per recinzioni residenziali, agricole, sportive e industriali. La sua struttura facilita la posa e garantisce buona versatilità di utilizzo.

Disponibile nelle versioni Simplex Ø 1,7 mm e Simplexfort Ø 2,1 mm.

PRODUCT

Fencing mesh with flexible, resilient diamond-shaped openings that adapts readily to uneven or sloping ground.

Made from galvanised steel wire, it is suitable for residential, agricultural, sports and industrial fencing. Its structure facilitates installation and offers versatility across different applications.

Available as Simplex with a wire diameter of 1.7 mm and Simplexfort with a wire diameter of 2.1 mm.

Dati tecnici / Technical data

Codice Code	Versione Version	Maglia (mm) Mesh (mm)	Altezza (cm) Height (cm)	Ø filo (mm) Wire Ø (mm)	Rotolo (m) Roll (m)
022	Simplex	50x50	100	1,7	25
023	Simplex	50x50	120	1,7	25
024	Simplex	50x50	150	1,7	25
025	Simplex	50x50	175	1,7	25
026	Simplex	50x50	200	1,7	25
014	Simplexfort	50x50	100	2,1	25
015	Simplexfort	50x50	120	2,1	25
016	Simplexfort	50x50	150	2,1	25
017	Simplexfort	50x50	175	2,1	25
018	Simplexfort	50x50	200	2,1	25

I dati tecnici sono puramente indicativi. Reti Sud si riserva di apportare modifiche in qualsiasi momento.

Technical data are for guidance only. Reti Sud reserves the right to make changes at any time.

Posa e impiego

Installation and use

IT

Le maglie romboidali si articolano tra loro e consentono alla rete di adattarsi al tracciato. La posa richiede un tiro uniforme per conservare la forma delle maglie ed evitare zone troppo aperte o ristrette.

Prima di iniziare

- Selezionare il codice per altezza e maglia; per la versione zincata verificare anche il diametro della variante.
- Controllare pali, fili di tensione e legature prima della posa; per la rete plastificata evitare utensili che incidano il rivestimento.

Sequenza operativa

1. Tracciare la recinzione e posare pali, terminali e saette. Attendere che gli ancoraggi siano pronti a ricevere la trazione prima di tendere la rete.
2. Predisporre i fili di tensione e i relativi tendifilo richiesti dal sistema scelto. Distribuire la regolazione tra i diversi fili senza deformare i pali.
3. Aprire il rotolo su una superficie regolare, sciogliere gli intrecci e fissare il bordo iniziale distribuendo il tiro su più maglie. Non tendere tirando una sola spirale.
4. Collegare la rete ai sostegni e ai fili con legature compatibili. Tagliare le eccedenze solo dopo aver verificato allineamento e fissaggi; ripiegare le estremità.

Controlli finali

- Verificare una tensione uniforme e l'assenza di maglie schiacciate, fili sporgenti o rivestimenti danneggiati.
- Ricontrollare terminali, raccordi e punti bassi dopo l'assestamento; sostituire i tratti danneggiati.

Parametri da definire

La deformabilità della maglia non autorizza a forzare forti dislivelli; suddividere il percorso in tratti quando necessario.

Indicazioni generali di impiego: applicare le istruzioni dei componenti effettivamente forniti e il progetto della recinzione. / General use guidance: follow the supplied component instructions and the fence design.

EN

Interwoven diamond openings allow the mesh to follow the route. Installation requires an even pull to preserve the opening shape and avoid excessively open or compressed areas.

Before you start

- Select the code by height and opening; for galvanised mesh, also check the variant wire diameter.
- Check posts, line wires and ties before installation; for coated mesh, avoid tools that cut into the coating.

Working sequence

1. Set out the fence and install posts, end posts and struts. Wait until the anchors can take the load before tensioning the mesh.
2. Install the line wires and tensioners required by the selected system. Adjust the wires progressively without bending the posts.
3. Open the roll on a level surface, release tangles and secure the first edge while spreading the pull across several openings. Do not tension by pulling one spiral.
4. Connect the mesh to posts and line wires using compatible ties. Cut excess material only after checking alignment and attachments; turn the ends inward.

Final checks

- Check for even tension and for crushed openings, projecting wire ends or damaged coatings.
- Recheck end posts, joints and low points after settlement; replace damaged sections.

Parameters to define

Mesh flexibility does not justify forcing major changes in level; divide the route into sections where necessary.