


Rete esagonale

Hexagonal wire netting

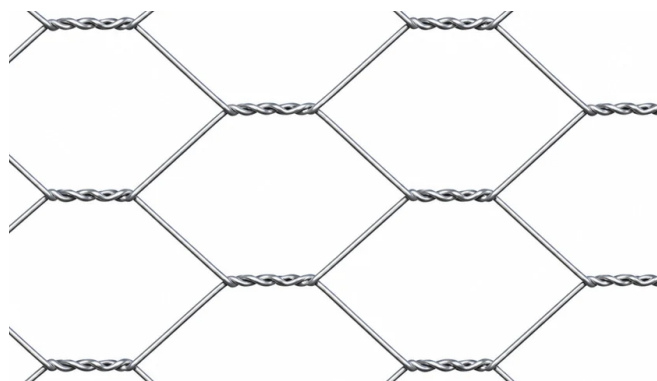

PRODOTTO

Rete metallica a maglia esagonale a doppia torsione, realizzata con filo d'acciaio zincato.

La particolare struttura garantisce flessibilità e buona resistenza, rendendola adatta a recinzioni per pollame e piccoli animali, delimitazioni agricole e diversi impieghi rurali.

Fornita in rotoli, è disponibile in diverse altezze e configurazioni di maglia.

PRODUCT

Double-twist hexagonal wire netting made from galvanised steel wire.

Its construction provides flexibility and strength, making it suitable for poultry and small-animal enclosures, agricultural boundaries and various rural applications.

Supplied in rolls, it is available in different heights and mesh configurations.

Dati tecnici / Technical data

Codice Code	Tipo maglia Mesh type	Altezza (cm) Height (cm)	Rotolo (m) Roll (m)
298	16/2	100	50
299	16/2	150	50
300	16/2	200	50
301	19/2	100	50
303	19/2	150	50
305	19/2	200	50
311	25/3	100	50
313	25/3	150	50
315	25/3	200	50

Posa e impiego

Installation and use

IT

La rete esagonale è impiegata per piccoli animali e delimitazioni rurali. La corretta scelta della maglia e la chiusura dei bordi sono essenziali: un bordo non fissato può creare un varco anche quando la rete è integra.

Prima di iniziare

- Valutare dimensione degli animali, altezza e condizioni del terreno; leggere la designazione commerciale con la tabella.
- Predisporre sostegni e collegamenti continui anche in prossimità di porte e cambi di direzione.

Sequenza operativa

1. Tracciare la recinzione e posare pali, terminali e saette. Attendere che gli ancoraggi siano pronti a ricevere la trazione prima di tendere la rete.
2. Predisporre i fili di tensione e i relativi tendifilo richiesti dal sistema scelto. Distribuire la regolazione tra i diversi fili senza deformare i pali.
3. Srotolare senza torcere le maglie, fissare il primo bordo e distendere gradualmente. Evitare il tiro eccessivo che allunga o restringe le aperture esagonali.
4. Collegare la rete ai sostegni e ai fili con legature compatibili. Tagliare le eccedenze solo dopo aver verificato allineamento e fissaggi; ripiegare le estremità.

Controlli finali

- Verificare una tensione uniforme e l'assenza di maglie schiacciate, fili sporgenti o rivestimenti danneggiati.
- Ricontrollare terminali, raccordi e punti bassi dopo l'assestamento; sostituire i tratti danneggiati.

Parametri da definire

Interramento, grembiule alla base e distanza dal terreno vanno definiti per l'animale e il contesto: non esiste una quota universale.

Indicazioni generali di impiego: applicare le istruzioni dei componenti effettivamente forniti e il progetto della recinzione. / General use guidance: follow the supplied component instructions and the fence design.

EN

Hexagonal mesh is used for small animals and rural boundaries. Selecting the opening and securing the edges is essential: an unsecured edge can create a gap even when the mesh is intact.

Before you start

- Assess animal size, height and ground conditions; read the commercial designation with the table.
- Provide supports and continuous attachments near gates and changes of direction.

Working sequence

1. Set out the fence and install posts, end posts and struts. Wait until the anchors can take the load before tensioning the mesh.
2. Install the line wires and tensioners required by the selected system. Adjust the wires progressively without bending the posts.
3. Unroll without twisting the mesh, secure the first edge and spread it progressively. Avoid excessive pull that elongates or narrows the hexagonal openings.
4. Connect the mesh to posts and line wires using compatible ties. Cut excess material only after checking alignment and attachments; turn the ends inward.

Final checks

- Check for even tension and for crushed openings, projecting wire ends or damaged coatings.
- Recheck end posts, joints and low points after settlement; replace damaged sections.

Parameters to define

Buried edges, ground aprons and ground clearance must be defined for the animal and setting; there is no universal dimension.